

 


Digital life made easy

Join-In for Grid 3


Full Screen Video Player



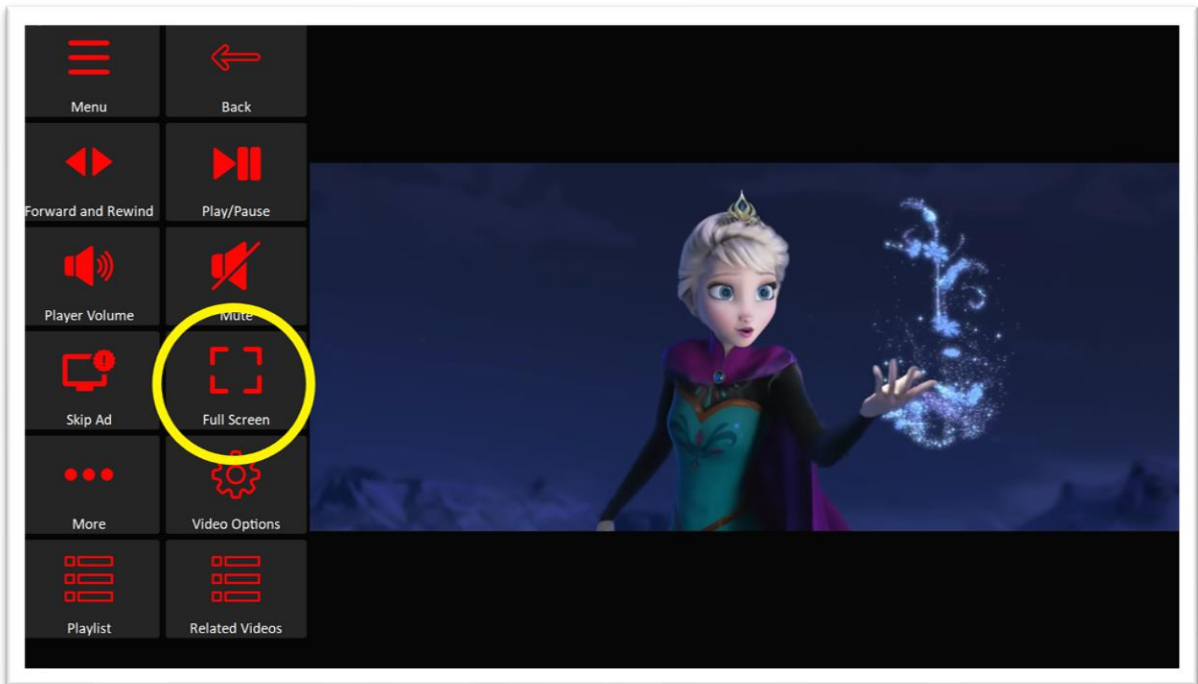

About Join-In Full Screen Video Player

- The latest version of Join-In includes **Full Screen Video Player** controls for every app with video content.
- Whenever you see the **Full Screen** icon (see above circled) on the video player page of any application, clicking it will take you to the **Full Screen Video Player** controls.
- These controls aim to improve your viewing experience by showing videos on the whole of your device's screen, while also reducing the visual impact of the Grid 3 toolbars provided.
- Important – the controls do not contain text, and there is a low contrast between the colors used for icons and the background color on the Gridset. Menus are narrower than usual, and the Grid 3 toolbar can even be reduced to just one button in the corner of the screen. It is therefore recommended that you familiarize yourself with this guide before using the full screen controls.
- There is also a **Lite** version of the **Full Screen Video Player** with larger buttons. These controls are provided when you enter full screen mode of a video you are watching in any **Lite** Join-In application.

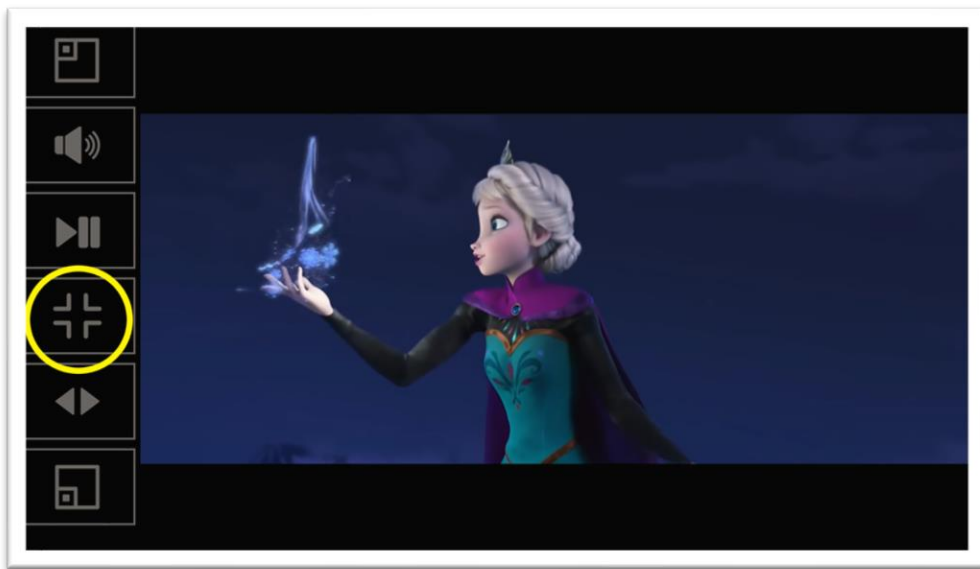

Main Controls



- Enter **Completely Full Screen** view with a single exit button remaining in the **Top Left Corner**.



- Go to **Volume Controls**.



- **Play / Pause** video.




- **Exit Full Screen Video Player** and regular video view in the app you are using.



- Go to **Forward / Back** and **Bookmark** controls to jump to different parts of the video.



- Enter **Completely Full Screen** view with a single exit button remaining in the **Bottom Left Corner**.

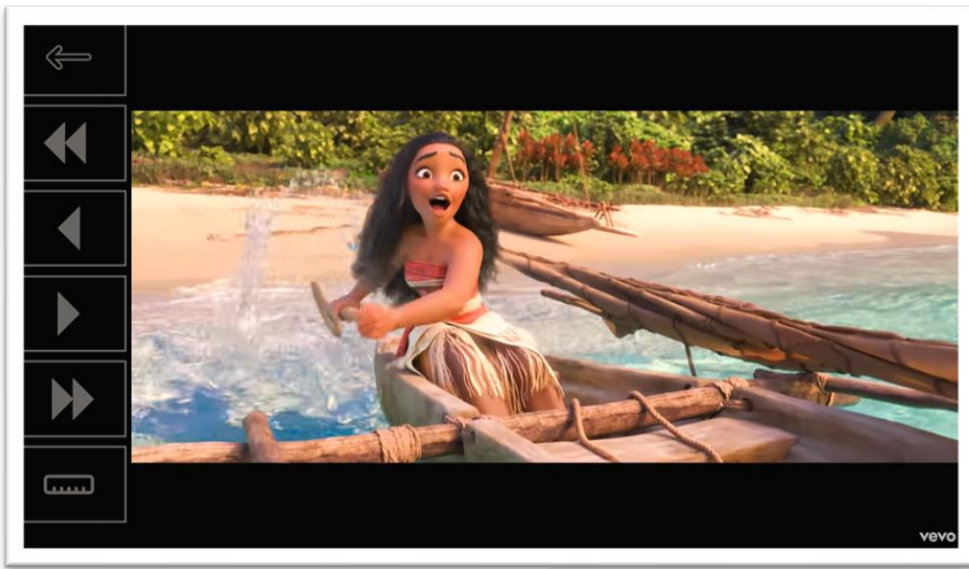

Forward / Back



- Back to **Main Controls**



- **Big Jump Back** (30 or 60 seconds depending on app)



- **Small Jump Back** (5 or 10 seconds depending on app)




- **Small Jump Forward** (5 or 10 seconds depending on app)



- **Big Jump Forward** (30 or 60 seconds depending on app)



- Go to **Bookmark** controls for jumping to specific points in the video

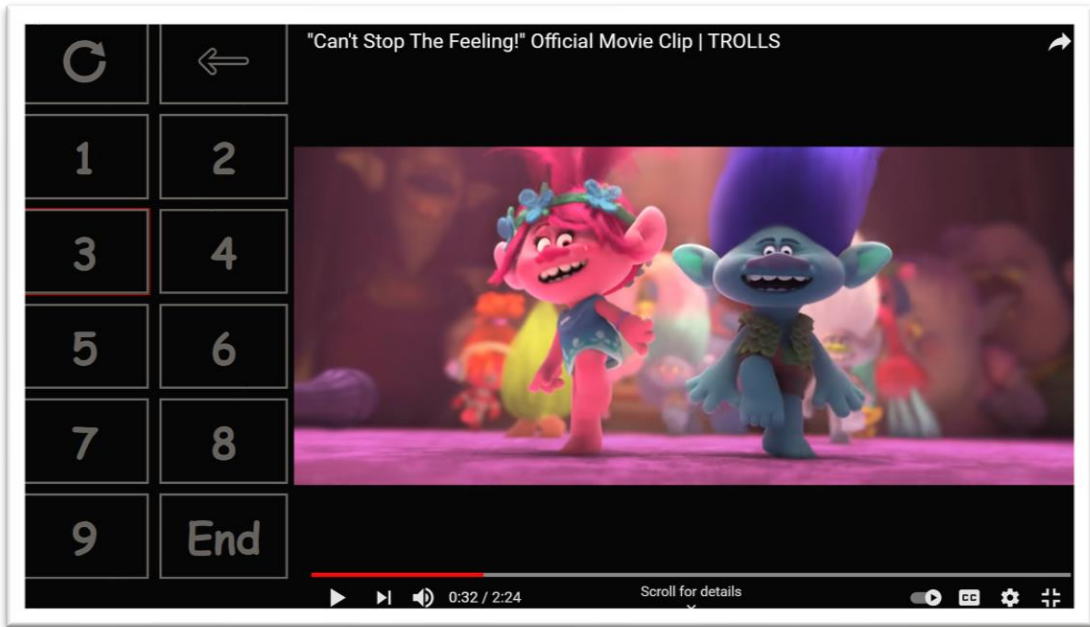

Bookmarks



- Back to **Forward / Back Controls**.



- **Restart** video.



- Jump to **End** of video.



- Number bookmarks split the video you are watching into 10 equal segments and allow you to navigate directly to different points of the video on this basis. For example, the **Number 5** represents the **Halfway Point** of video.



Completely Full Screen



- In **Completely Full Screen** mode, the video you are watching fills the entire device you are watching on.
- Only one button of the Grid 3 toolbar remains at this point – either in the **Top Left Corner** or the **Bottom Left Corner**. This button returns you to the **Main Controls**.
- Important – This button appears in the corner so that it feels less intrusive and improves your viewing experience. However, this may mean that is harder to see or activate for some users.
- To see a bigger button in the corner of **Full Screen Video Player**, you could try the **Lite** version of the app you are using.