




Digital life made easy

Join-In for Communicator 5


Accessible Disney Plus



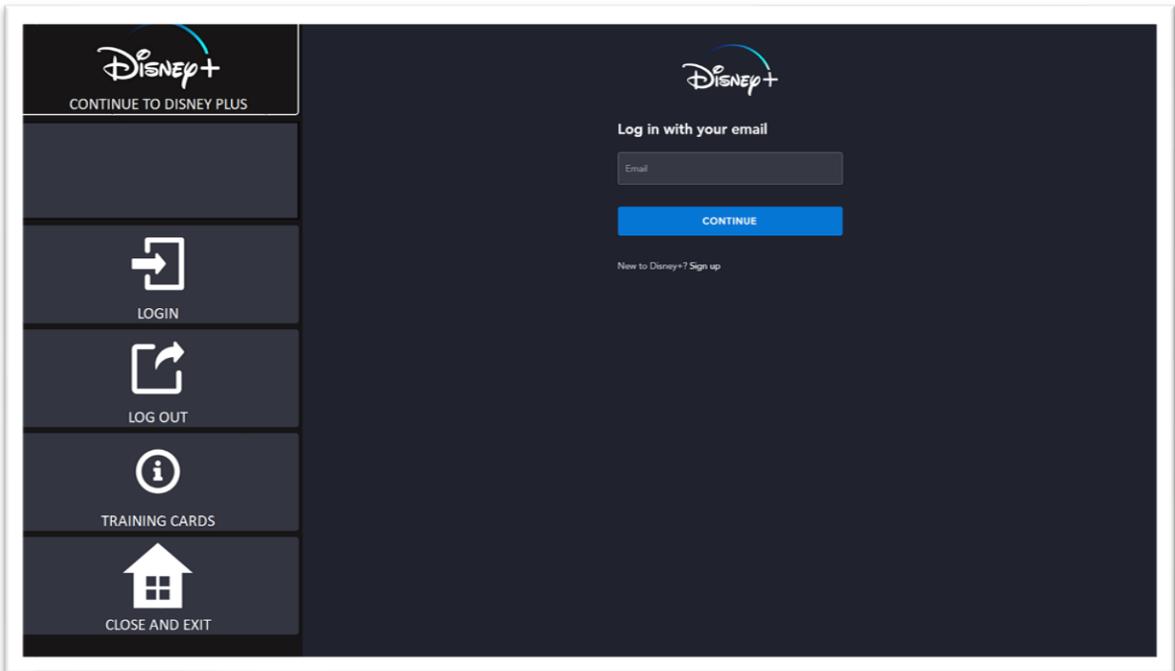

Getting Started

- Requirements – to use Accessible Disney + you need a Disney + account. Make sure you have your Disney + login and password available.
- Login – After selecting Accessible Netflix from your Home Page, follow the sequence – **LOGIN AND INFO** => **LOGIN** => **EMAIL** => enter your Disney + account email => **CONTINUE / LOGIN** => **PASSWORD** => enter your Disney + account password => **CONTINUE / LOGIN** .
- It is now advisable to select a default profile. Go to **SELECT PROFILE**, and click the **LEFT** or **RIGHT** buttons, to switch between profiles. You can set a default profile (**SET AS DEFAULT PROFILE**) or just select a profile (**SELECT PROFILE**).
- You can also add or edit profiles – change the profile picture, language etc.
- You are now ready to use Accessible Disney +. Click **CONTINUE TO DISNEY PLUS** to start using the app.

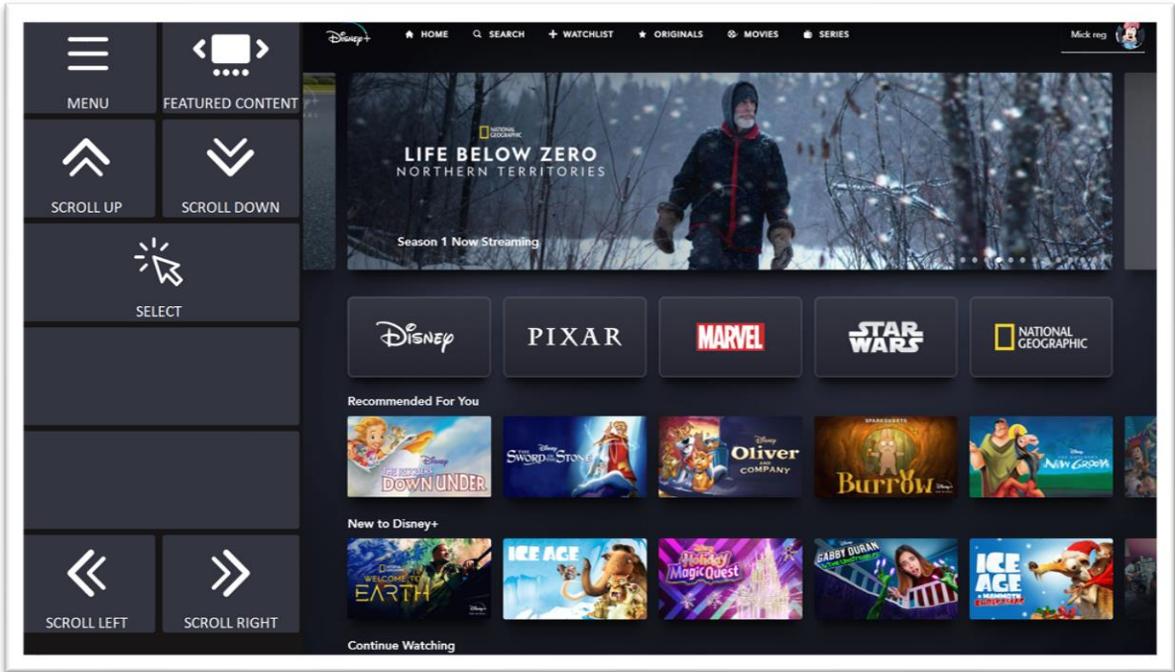

Disney + Home Page for Eye-Gaze, Mouse Dwell and Touch users


Home Page

- **MENU** – go to Disney + menu.
- **FEATURED CONTENT** - browse the featured content (movies and series that are presented on the top of the screen).
- **SCROLL UP, SCROLL DOWN** – scroll the screen up or down.
- **SCROLL LEFT, SCROLL RIGHT** - scroll the screen left or right.
- **SELECT** – once the item you want to select is on the screen, click the **SELECT** button. This will make the items (movies and series) selectable using Eye Gaze, Mouse Dwell or Touch.

Notes:


- if you are Switches as your access method, your grid will include arrows that will allow you to navigate between the different movie and series (example on the next page).
- If you have selected kids' profile, the collections on the Disney + home screen will be different, but navigation and selection will work the same.

Home Page - switch users

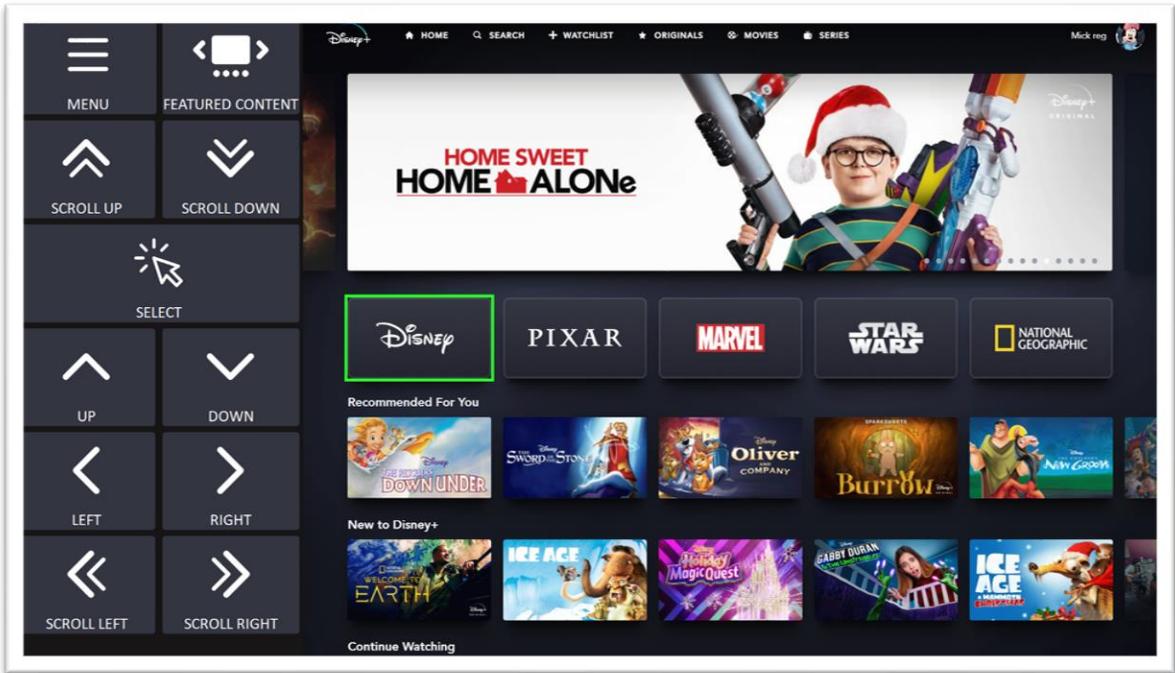


Disney + Home Page switch users. Navigation is done using the **UP, DOWN, LEFT** and **RIGHT** arrows

Home Page - Kids

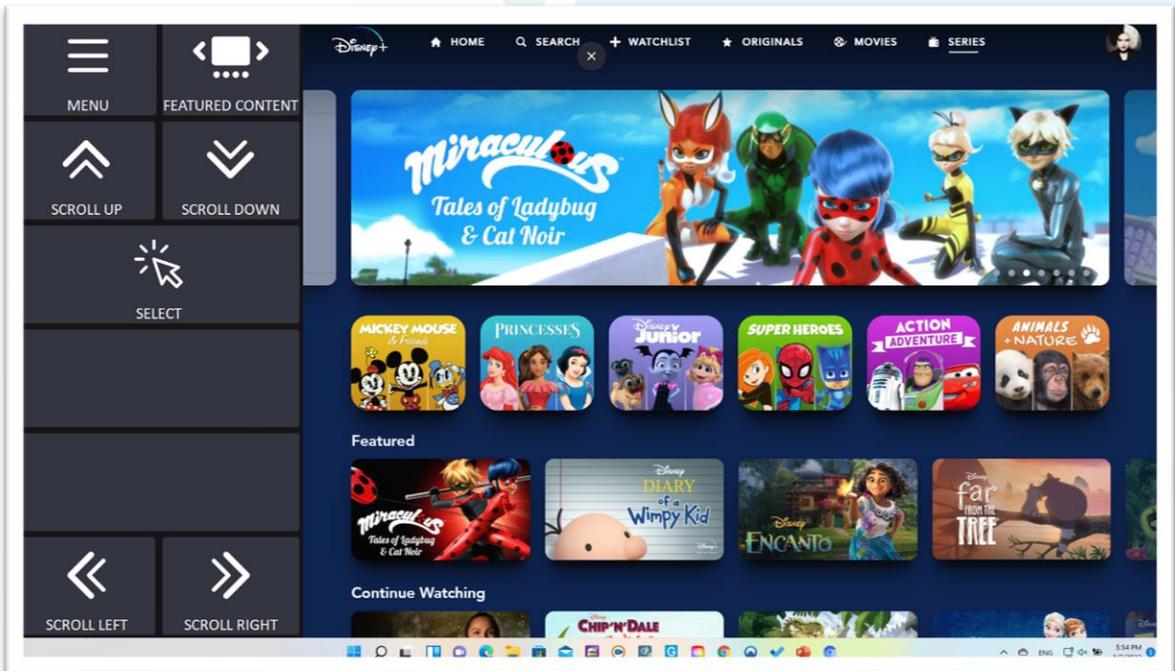


Kids' profile Home Page - Disney, Pixar, Marvel... are replaced by Mickey Mouse, Princesses, Disney Junior.... Everything else stays the same.

Home Page – in Selection Mode

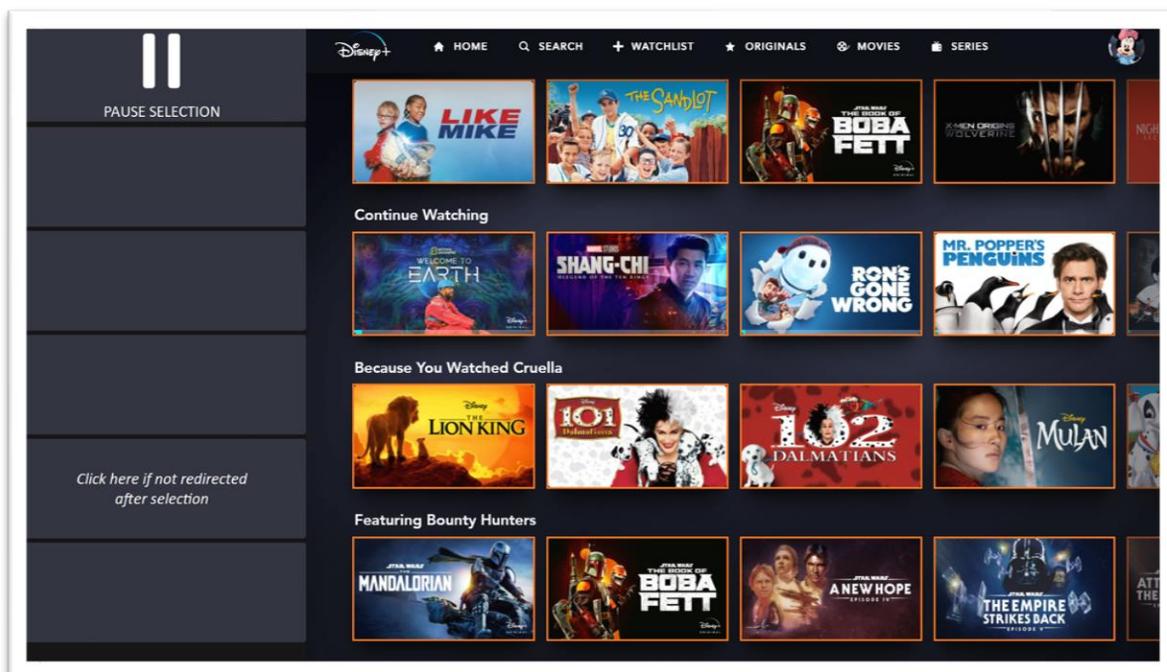


After clicking SELECT, the items on the right can be selected using your selection method

Playing a Movie or a Series

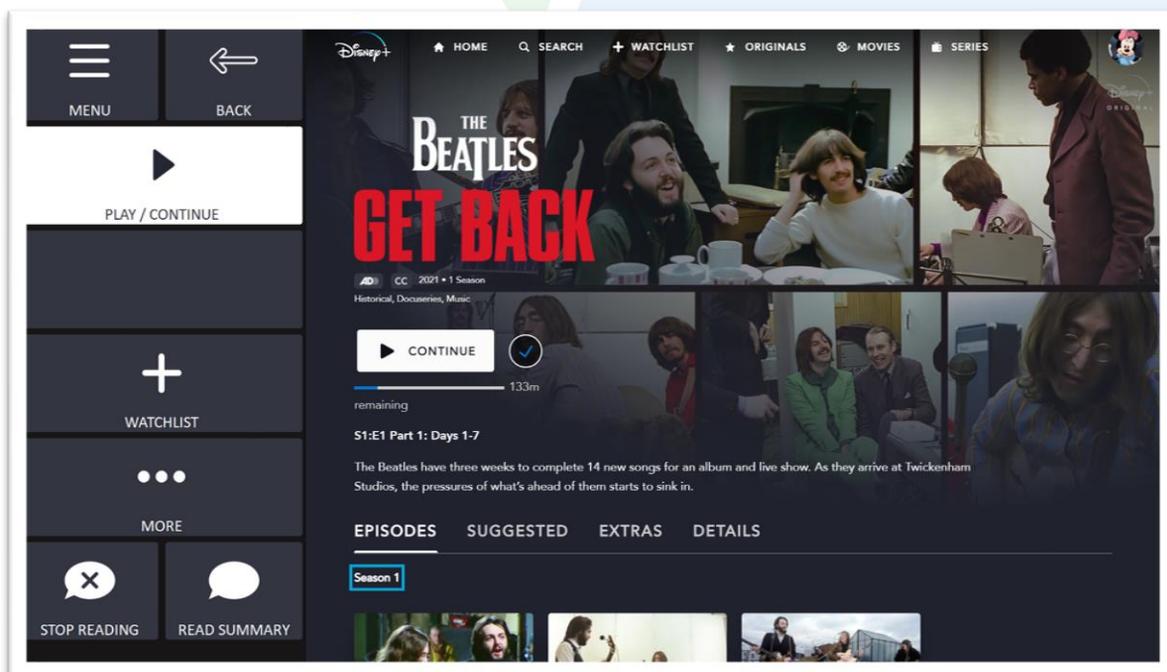


After selecting a movie or a series, you can play it, browse episodes, add to your watchlist and more...

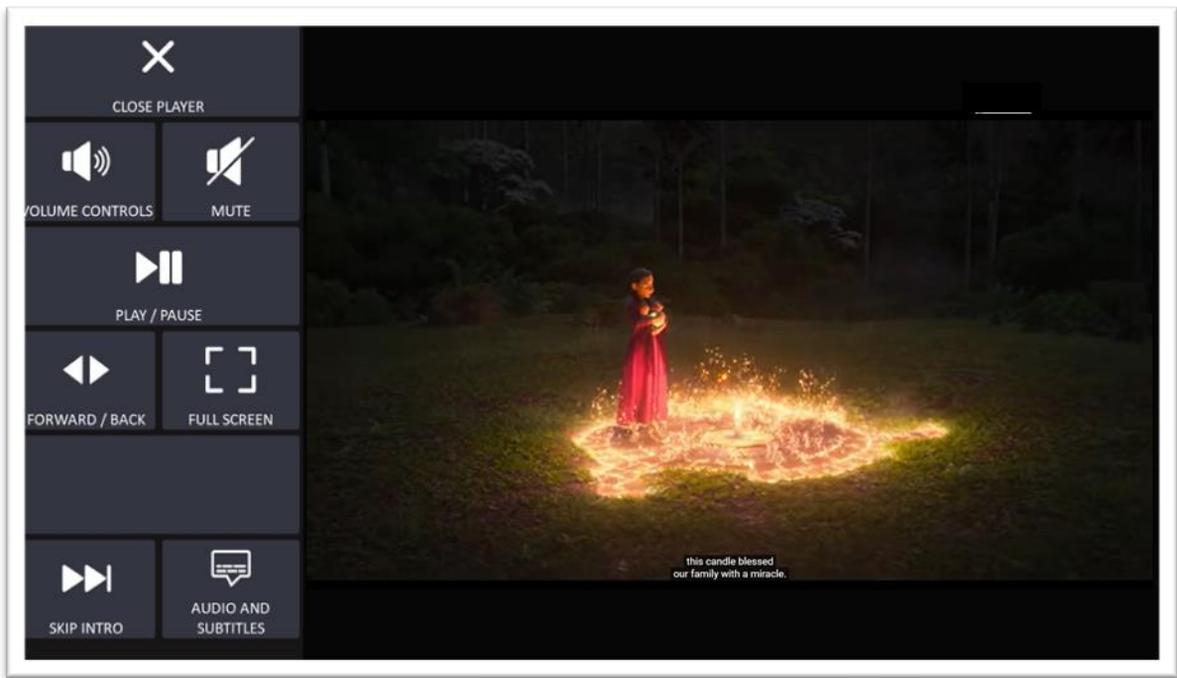

Disney + Video Player

Video Player

- **CLOSE PLAYER** – stop the video you are watching and return to browsing.
- **VOLUME CONTROLS** – go to a page with volume controls.
- **MUTE** – mute or unmute the video.
- **PLAY / PAUSE** – start or stop the video playing.
- **FORWARD / BACK** – jump forward and back within the video you are watching, or use bookmarks to go to a specific point in the video.
- **FULL SCREEN**– view your video at full size with Join-In [Full Screen Video Player](#).
- **SKIP INTRO** – skip the intro of the series and go directly to the episode you want to watch.
- **AUDIO AND SUBTITLES** – adjust the audio and subtitle languages and settings.

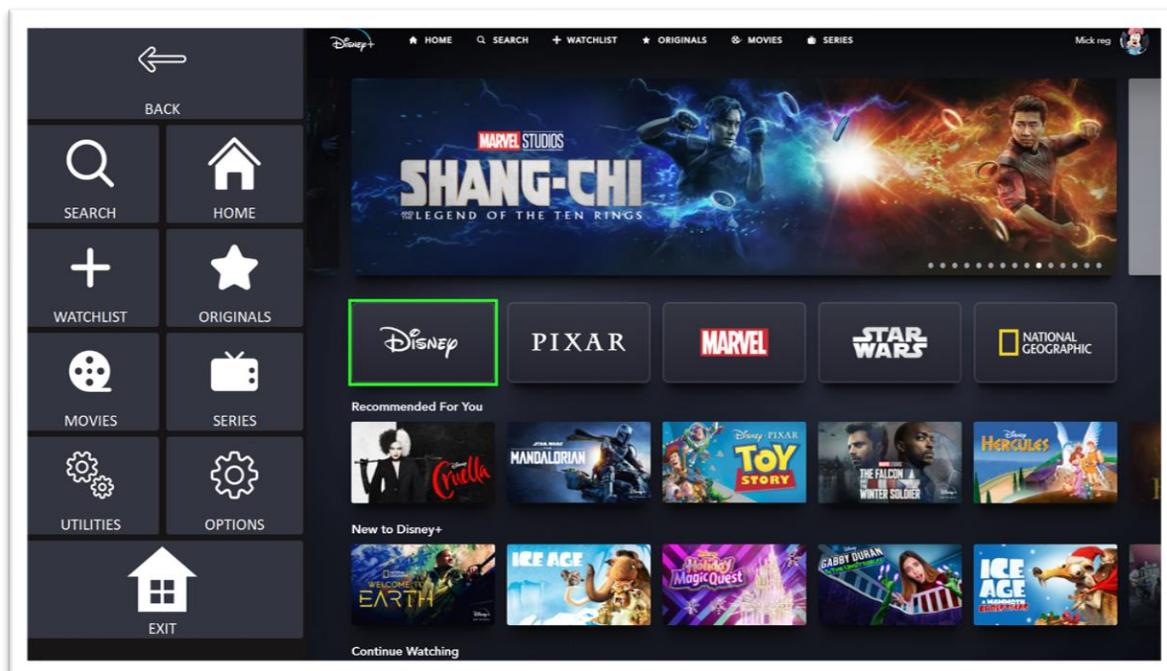

Menu

- **SEARCH** – allows you to type a search phrase and search Disney+
- **Home** – go to Disney+ Home Page.
- **WATCHLIST** – browse your watchlist.
- **ORIGINALS** – browse Disney originals.
- **MOVIES** – browse Movies only.
- **SERIES**– browse series only.
- **UTILITIES** – recover Disney+ if something doesn't work properly, close windows you do not need, close popup messages, zoom in or zoom out...
- **OPTIONS** – toggle text enlargement, change the computer volume, go to [Join-in Settings](#), toggle auto-read, manage your Disney profiles (and switch to another profile), log-in to or log out of Disney+, go to additional options.
- **EXIT** – exit to Communicator 5 Home Page, with or without closing Disney+.