





Digital life made easy

# Join-In for Communicator 5


## Full Screen Video Player

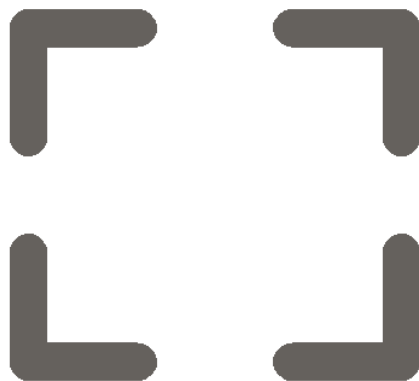

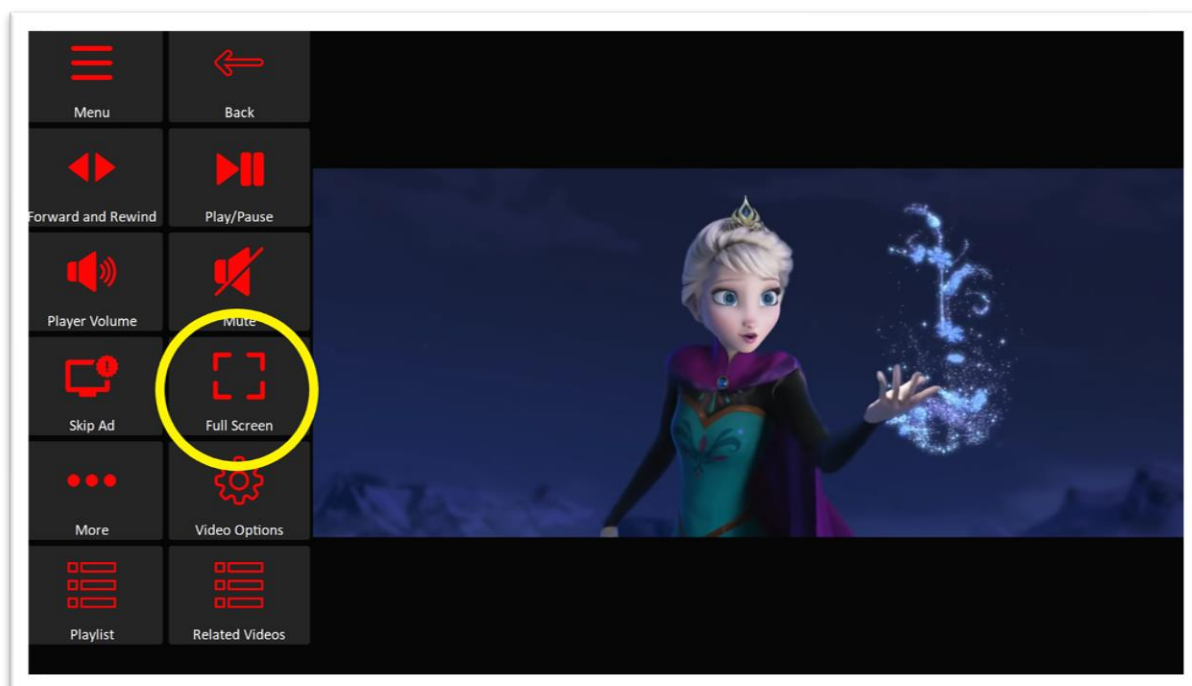

## About Join-In Full Screen Video Player

- The latest version of Join-In includes **Full Screen Video Player** controls for every app with video content.
- Whenever you see the **Full Screen** icon (see above circled) on the video player page of any application, clicking it will take you to the **Full Screen Video Player** controls.
- These controls aim to improve your viewing experience by showing videos on the whole of your device's screen, while also reducing the visual impact of the Communicator 5 toolbars provided.
- Important – the controls do not contain text, and there is a low contrast between the colors used for icons and the background color on the pageset. Menus are narrower than usual, and the Communicator 5 toolbar can even be reduced to just one semi-transparent button in the corner of the screen. It is therefore recommended that you familiarize yourself with this guide before using the full screen controls.
- There is also a **Lite** version of the **Full Screen Video Player** with larger buttons. These controls are provided when you enter full screen mode of a video you are watching in any **Lite** Join-In application.

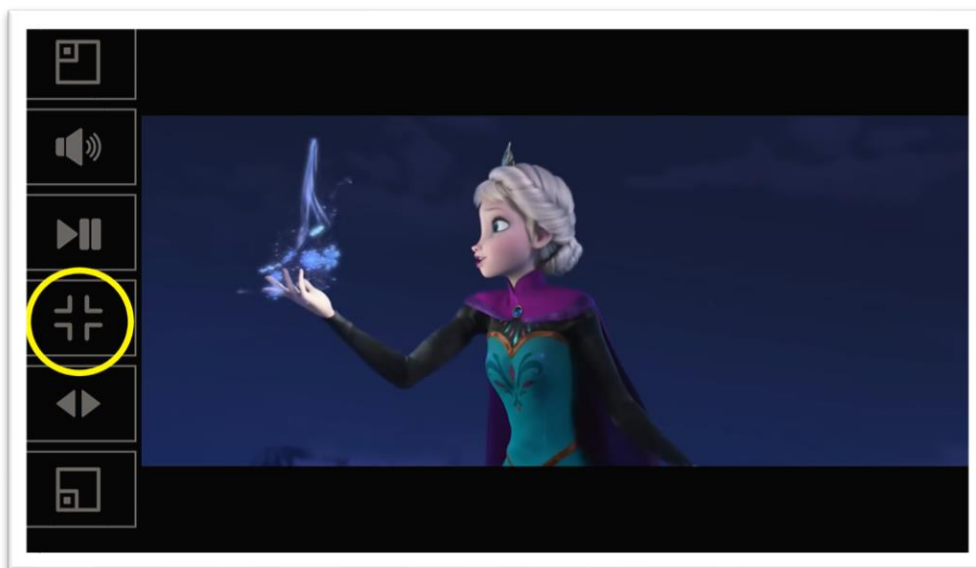

## Main Controls



- Enter **Completely Full Screen** view with a single semi-transparent exit button remaining in the **Top Left Corner**.



- Go to **Volume Controls**.



- **Play / Pause** video.




- **Exit Full Screen Video Player** and regular video view in the app you are using.



- Go to **Forward / Back** and **Bookmark** controls to jump to different parts of the video.



- Enter **Completely Full Screen** view with a single semi-transparent exit button remaining in the **Bottom Left Corner**.

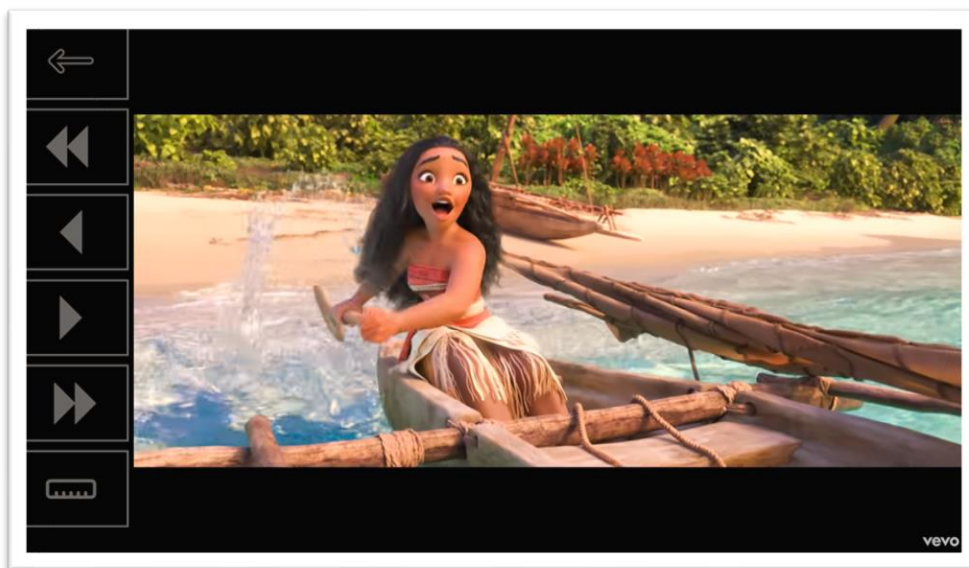

## Forward / Back



- Back to **Main Controls**



- **Big Jump Back** (30 or 60 seconds depending on app)



- **Small Jump Back** (5 or 10 seconds depending on app)




- **Small Jump Forward** (5 or 10 seconds depending on app)



- **Big Jump Forward** (30 or 60 seconds depending on app)



- Go to **Bookmark** controls for jumping to specific points in the video

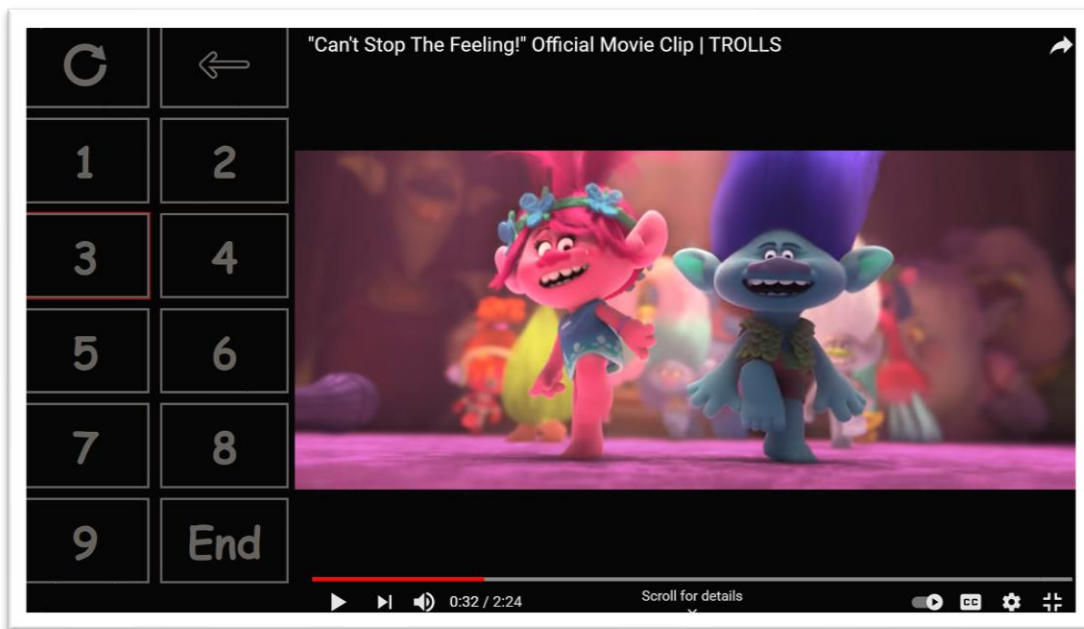

## Bookmarks



- Back to **Forward / Back Controls**.



- **Restart** video.

End

- Jump to **End** of video.

5

- Number bookmarks split the video you are watching into 10 equal segments and allow you to navigate directly to different points of the video on this basis. For example, the **Number 5** represents the **Halfway Point** of video.



## Completely Full Screen



- In **Completely Full Screen** mode, the video you are watching fills the entire device you are watching on.
- Only one button of the Communicator 5 pageset remains at this point – either in the **Top Left Corner** or the **Bottom Left Corner**. This button returns you to the **Main Controls**.
- Important – This button appears in the corner and is made semi-transparent so that it feels less intrusive and improves your viewing experience. However, this may mean that is harder to see or activate for some users.
- To see a bigger button in the corner of **Full Screen Video Player**, you should run the app you are using in **Lite** mode, which will launch a **Lite** version of the **Full Screen Video Player** with bigger buttons.